

USER MANUAL
914NG
TECHNICAL SHEET

D TECHNICAL SHEET




USER MANUAL

914NG

TECHNICAL SHEET

D.1 CRANE'S TECHNICAL DATA

Versions			2S	3S	4S	5S	6S	3SJ2	4SJ2	
Max. net lifting moment			 t m kNm	12.0 118	11.6 114	11.2 110	10.9 106	10.5 103	8.2 80.6	8.4 82.8
Max. dynamic moment			 $daNm$ kNm	15570 156					14120 141	
Capacity at min. hydraulic outreach	hook [S2]	 kg	2595	2465	2340	2225	2120	1020	1020	
	grab [S1]	 kg	2595	2465	2340	2225	2120	N/A	N/A	
	min. outreach	 m	4.63	4.71	4.80	4.88	4.96	8.05	8.27	
Capacity at max. hydraulic outreach	hook [S2]	 kg	1345	975	720	525	375	340	200	
	grab [S1]	 kg	1345	975	720	525	375	N/A	N/A	
	max.outreach	 m	8.53	10.66	12.80	15.03	17.26	16.22	18.35	
Capacity of 1st man. extension	capacity	 kg	975	720	525	375	280	260	130	
	max.outreach	 m	10.91	12.96	15.11	17.26	19.36	17.80	19.89	
Max. load height above the base for the last extension	hydraulic	 m	10.8	13.0	15.1	17.4	19.6	19.8	22.0	
	manual	 m	17.4	19.6	21.6	21.6	21.6	21.4	23.5	
Weight of crane without stabilizers			 kg	1610	1725	1830	1930	2020	2065	2185
Weight of stabilizers			ST-M kg	210						
			EX-M kg	270						
			EX-H kg	305						
			SE-H kg	360						
Weight of 1st man ext.			 kg	70	61	52	35	29	23	23
Max. working pressure			 bar	290						
Max. oil flow rate			 l/min	30						
			 l/min	60						
Max. power needed			 kW	18.9						
			 kW	37.7						
Oil tank capacity			 l	130						
Slewing angle			 °	425						
Gross slewing torque			 daNm	1420						
			 kNm	14.2						
Max boom inclination for use with CE winch			 °	75°						
Max. base inclination			 °	4°					3°	
Max. stabilizer force on the ground with stabilizers fully extended			ST daN	8025					7280	
			EX daN	6130					5560	
			SE daN	4960					4500	
Max. stabilizer pressure on the ground with stabilizers fully extended			ST MPa	3.2					2.9	
			EX MPa	2.4					2.2	
			SE MPa	2.0					1.8	
Lifting coversion factor, k			 kgm/bar	50.05						
Distribution factor of dyn. moment on base, β			 -	0.70						
Position of standard dead point (see D.6)			 ▲							

USER MANUAL

914NG

TECHNICAL SHEET

D.2 WINCH SETTINGS

T11 - SINGLE LINE PULL

Versions		2S	3S	4S	5S	6S	3SJ2	4SJ2
	Max line pull <i>kg</i>	1000	1000	1000	1000	1000	N/A	N/A

T11 - DOUBLE LINE PULL

Versions		2S	3S	4S	5S	6S	3SJ2	4SJ2
	Max line pull <i>kg</i>	1000	1000	1000	1000	1000	N/A	N/A

T12 - SINGLE LINE PULL

Versions		2S	3S	4S	5S	6S	3SJ2	4SJ2	
	Max line pull	kg	2000	2000	2000	2000 (*)	2000 (*)	N/A	N/A
Start angle - pull%		-	-	-	65°-60%	65°-60%	-	-	
Final angle - pull%		-	-	-	75°-60%	75°-55%	-	-	

N/A: configuration not available

(*): configuration requiring pull derating: available only for CE/TOP cranes (PCS)

Pull%: pull derating percentage



When the crane is equipped with winch, the max. working pressure and the limiter setting pressure are increased by 10 bar with respect to the standard ones.

D.3 TOTAL WEIGHTS

The table shows the total weights including oil inside the cylinders (fully retracted) and considering oil tank empty.

kg	Crane version						
Type of stabilizers	2S	3S	4S	5S	6S	3SJ2	4SJ2
ST-M	1820	1935	2040	2140	2230	2275	2395
EX-M	1880	1995	2100	2200	2290	2335	2455
EX-H	1915	2030	2135	2235	2325	2370	2490
SE-H	1970	2085	2190	2290	2380	2425	2545

Additional weight for T11 winch: 95 kg

Additional weight for T12 winch: 150 kg

Additional weight of 1st extra function activated with slides: 8 kg pro hydraulic extension

Additional weight of 2nd extra function activated with slides: 2 kg pro hydraulic extension

Additional weight of 1st extra function activated with hose reel: 20 kg

Additional weight of 2nd extra function activated with hose reel: 10 kg

The weights may vary by ±3%


USER MANUAL

914NG

TECHNICAL SHEET

D.4 OVERALL DIMENSIONS

FIXED STABILIZERS LEGS

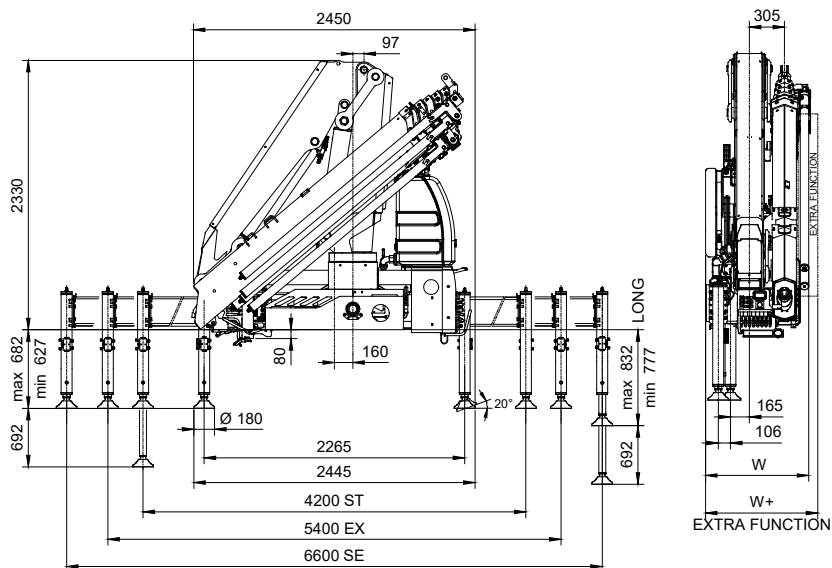


	2S	3S	4S	5S	6S
W (mm)	825	825	825	895	895
W+ (mm)	930 (*)	930 (*)	930 (*)	975 (**)	975 (**)

(*) activations with slides

(**) activations with hose reel


TURNING STABILIZERS LEGS

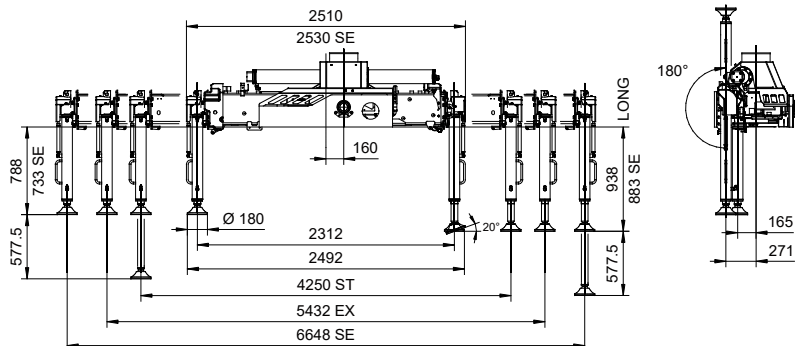


TECHNICAL SHEET

3SJ2

FIXED STABILIZERS LEGS

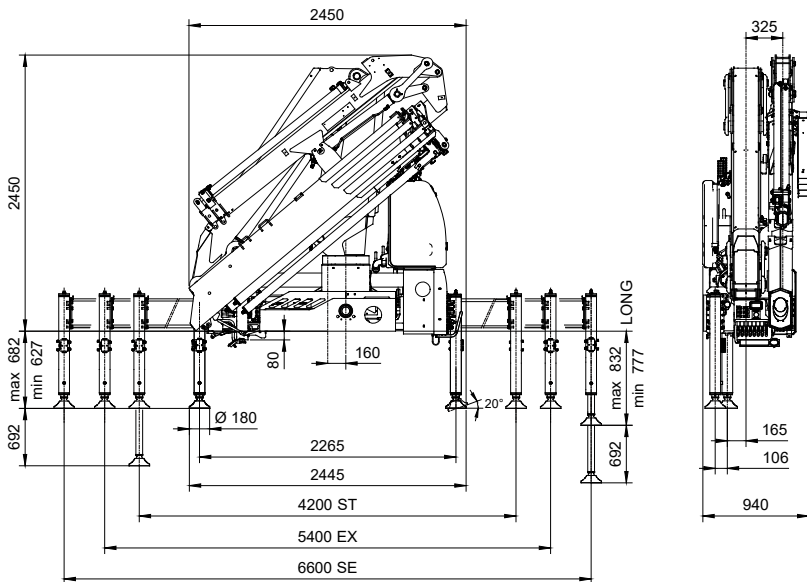

TURNING STABILIZERS LEGS

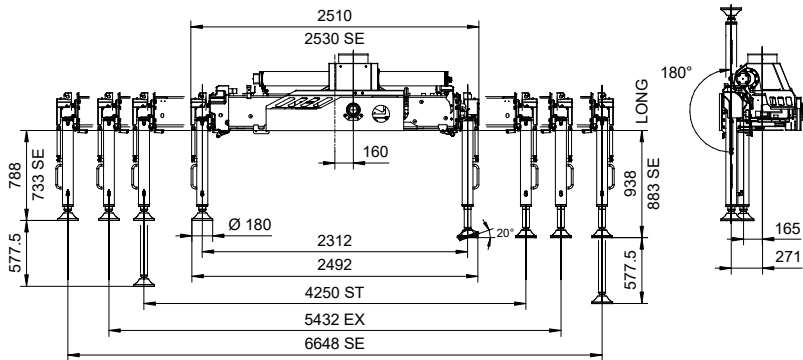


USER MANUAL

914NG


TECHNICAL SHEET

OVERALL DIMENSIONS 4SJ2

FIXED STABILIZERS LEGS

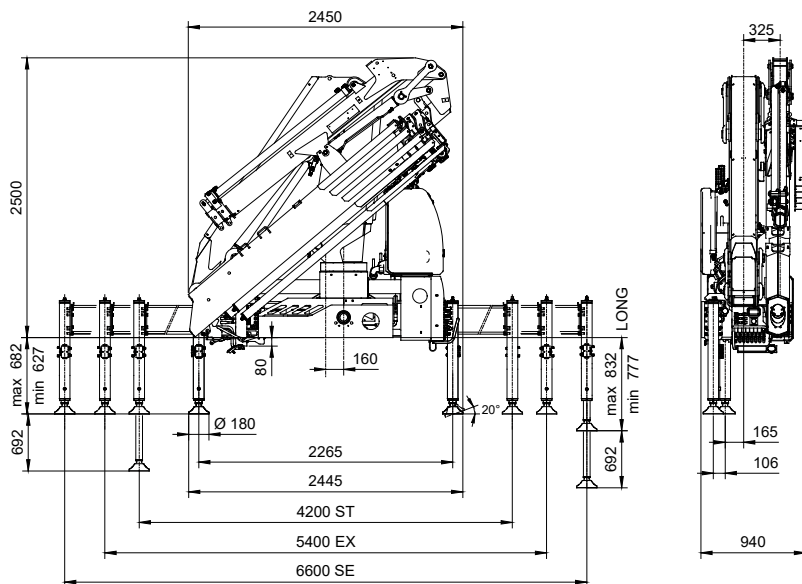


TURNING STABILIZERS LEGS

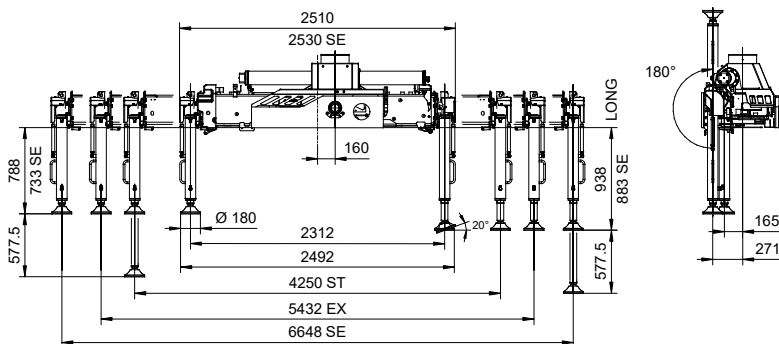

USER MANUAL
914NG
TECHNICAL SHEET

D.5 BASE DIMENSIONS AND MOUNTING BOLTS
















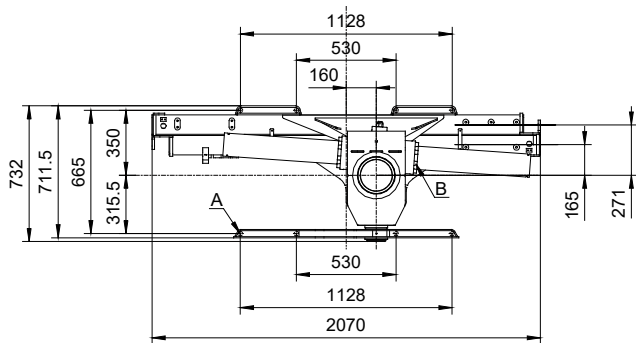


Ref.	Description	Q.ty	Material Grade	Size	Tightening torque
A	Kit with 8 crane mounting bolts	8	42CrMo4+QT EN 10083-3	M24x2 L=1100	400 Nm
	Kit with 4 crane mounting bolts	4	42CrMo4+QT EN 10083-3	M30x2 L=600	700 Nm
B	Fixing bolts for each slewing cylinder	8	8.8	M14x2 L=65	80 Nm

USER MANUAL **914NG** **TECHNICAL SHEET**

D.6 INSTALLATION TYPE NUMBER


Installation types numbers (ITN) for cranes with standard dead point (STOP) toward swing bridge.

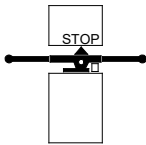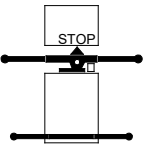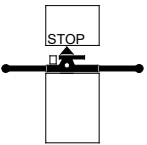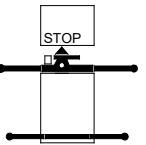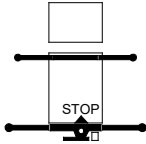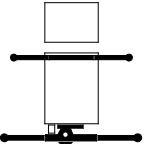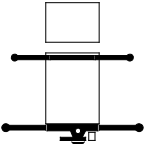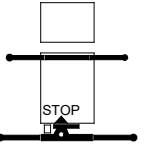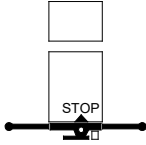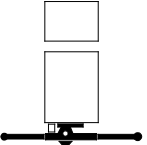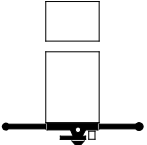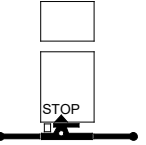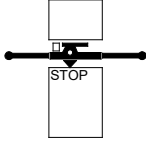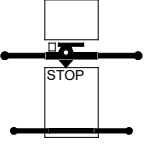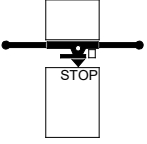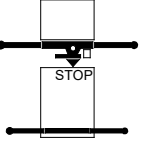OPPOSITE DEAD POINT		STANDARD DEAD POINT	
1	2	3	4
			
5	6	7	8
			
9	10	11	12
			
13	14	15	16
			

Legend:
▲ : position of dead point (STOP)
□ : position of main manual controls (on column side)

USER MANUAL
914NG
TECHNICAL SHEET


D.7 LIFTING HEIGHT CLOSE TO THE COLUMN

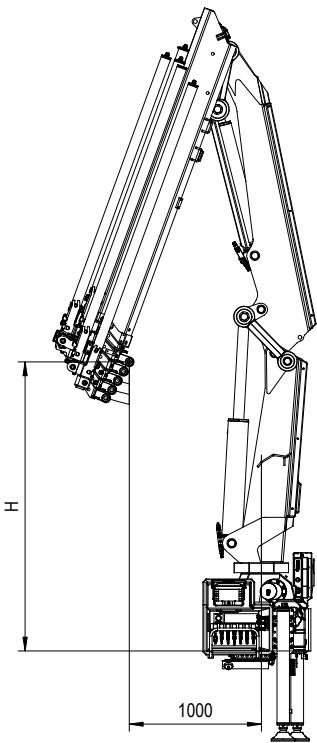

Version	H mm
2S	2192
3S	2109
4S	2026
5S	1946
6S	1871

USER MANUAL
914NG
TECHNICAL SHEET


D.8 LOAD CHARTS FOR USE WITH HOOK/TOOL
914NG 2S

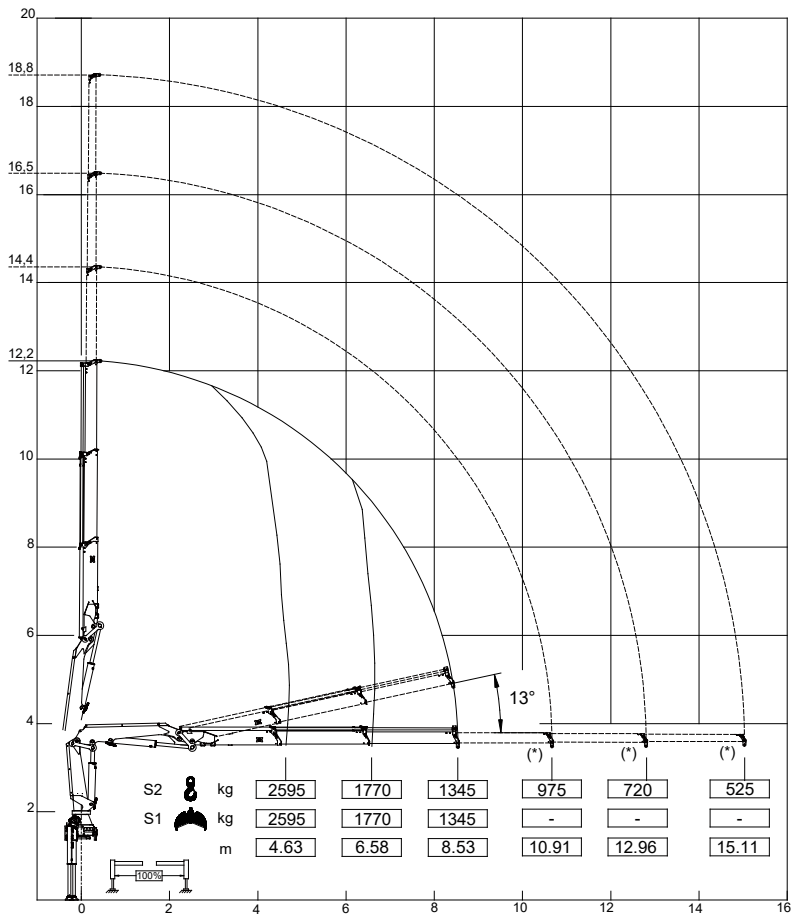

(*) Manual extensions (optional): these cannot lift additional hydraulic tools
If an additional lifting tool is mounted, the rated capacities shall be reduced by the tool's weight

USER MANUAL
914NG
TECHNICAL SHEET


LOAD CHARTS FOR USE WITH HOOK/TOOL
914NG 3S

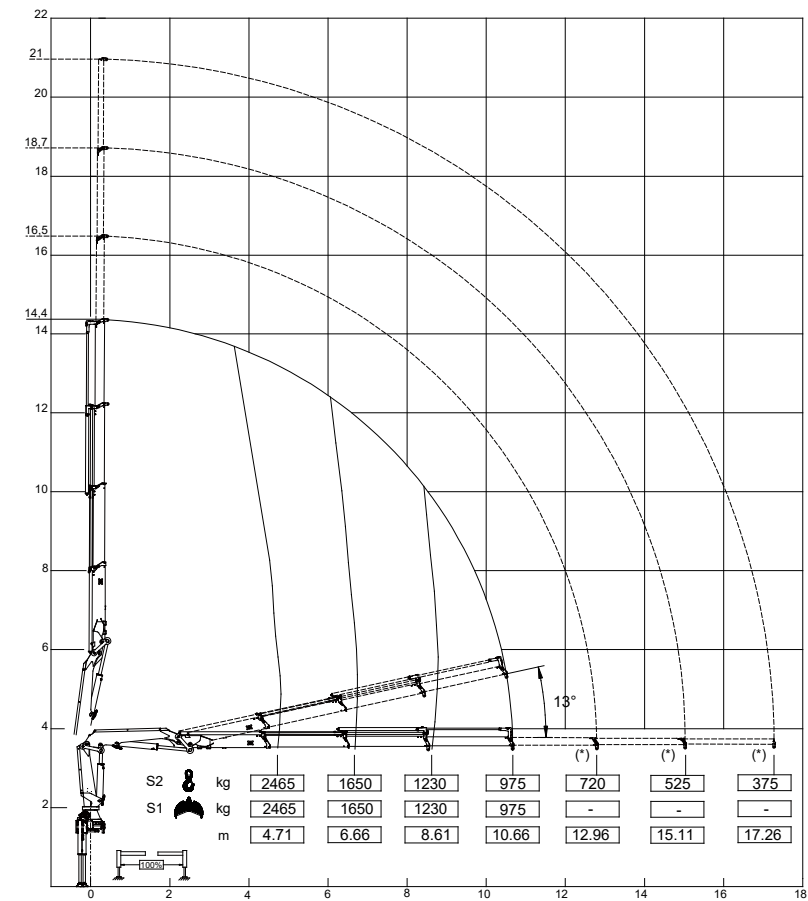

(*) Manual extensions (optional): these cannot lift additional hydraulic tools
 If an additional lifting tool is mounted, the rated capacities shall be reduced by the tool's weight

USER MANUAL
914NG
TECHNICAL SHEET


LOAD CHARTS FOR USE WITH HOOK/TOOL
914NG 4S

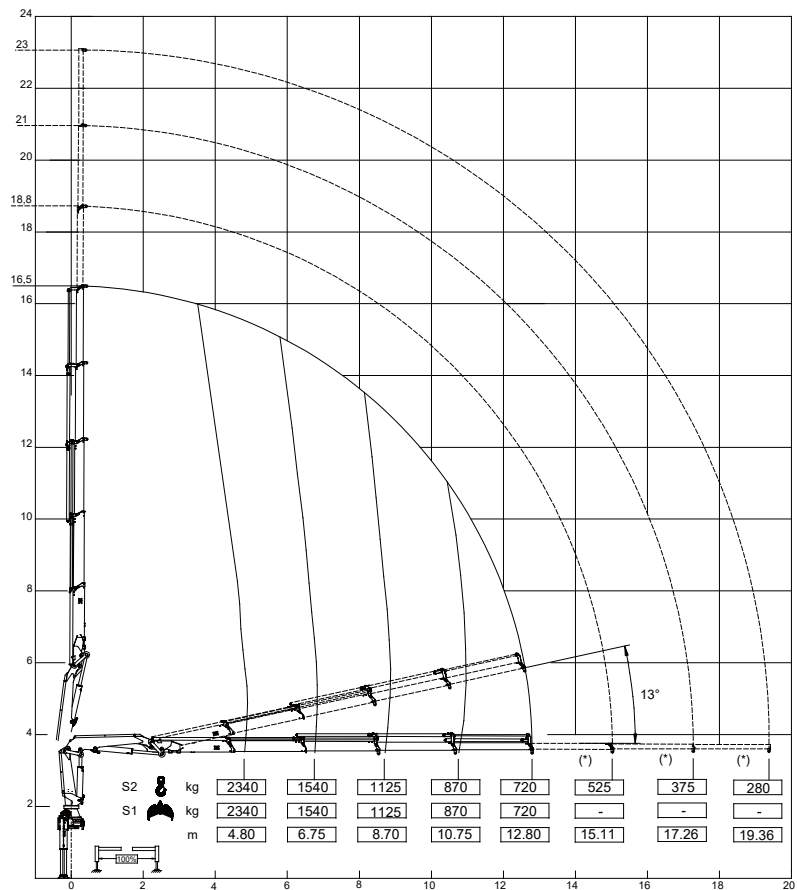

(*) Manual extensions (optional): these cannot lift additional hydraulic tools
If an additional lifting tool is mounted, the rated capacities shall be reduced by the tool's weight

USER MANUAL
914NG
TECHNICAL SHEET


LOAD CHARTS FOR USE WITH HOOK/TOOL
914NG 5S

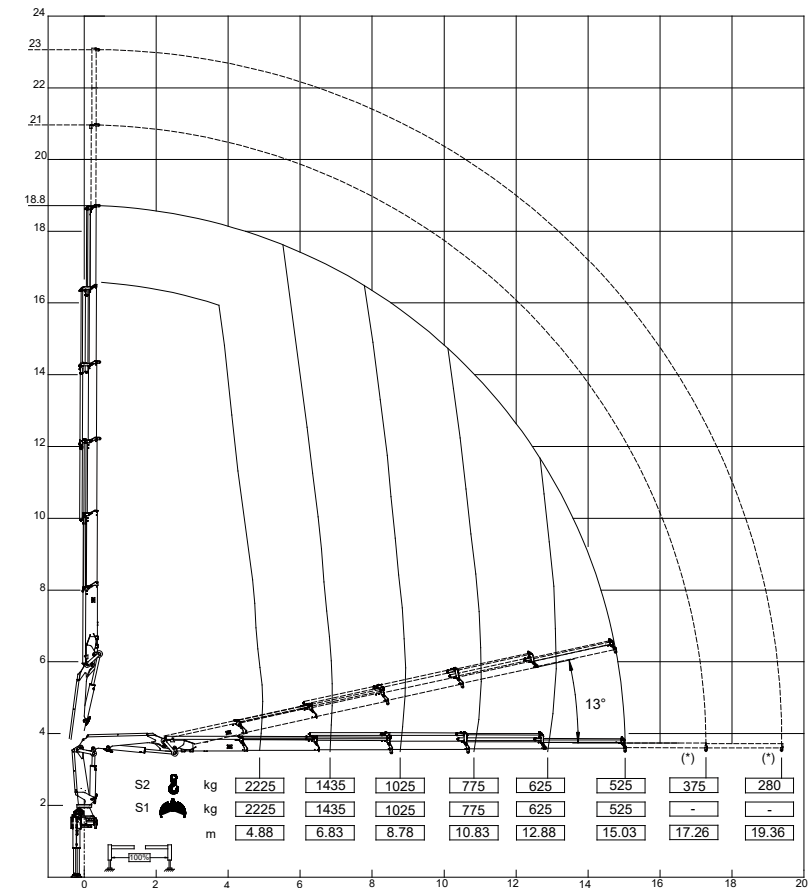

(*) Manual extensions (optional): these cannot lift additional hydraulic tools
If an additional lifting tool is mounted, the rated capacities shall be reduced by the tool's weight

USER MANUAL
914NG
TECHNICAL SHEET

LOAD CHARTS FOR USE WITH HOOK/TOOL
914NG 6S

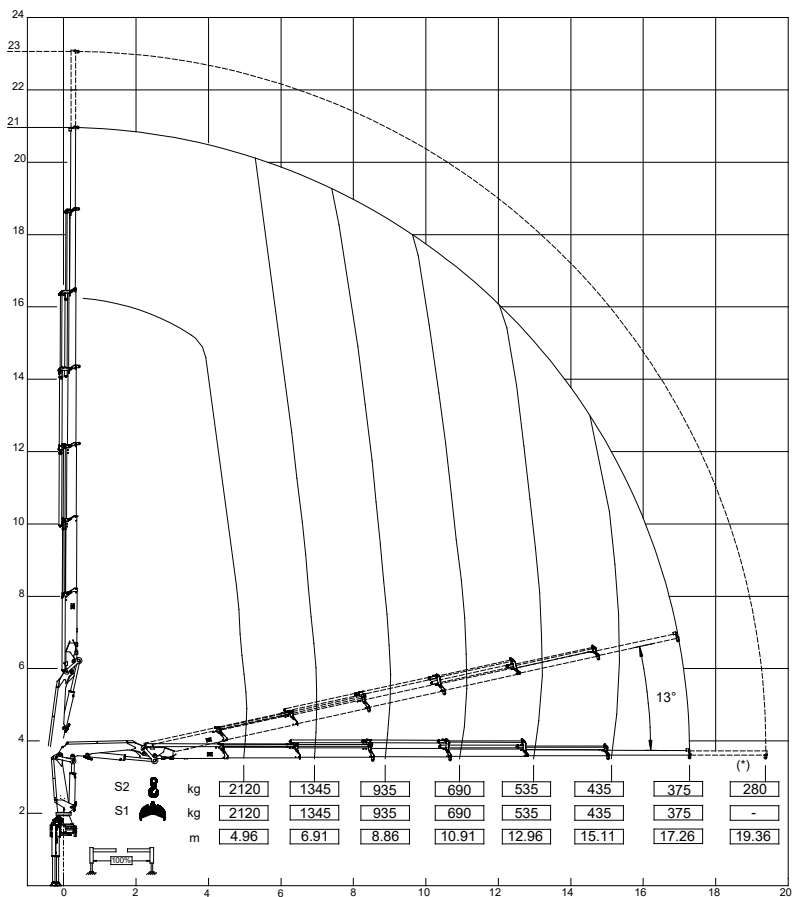


(*) Manual extensions (optional): these cannot lift additional hydraulic tools
If an additional lifting tool is mounted, the rated capacities shall be reduced by the tool's weight

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHARTS FOR USE WITH HOOK 914NG 3SJ2

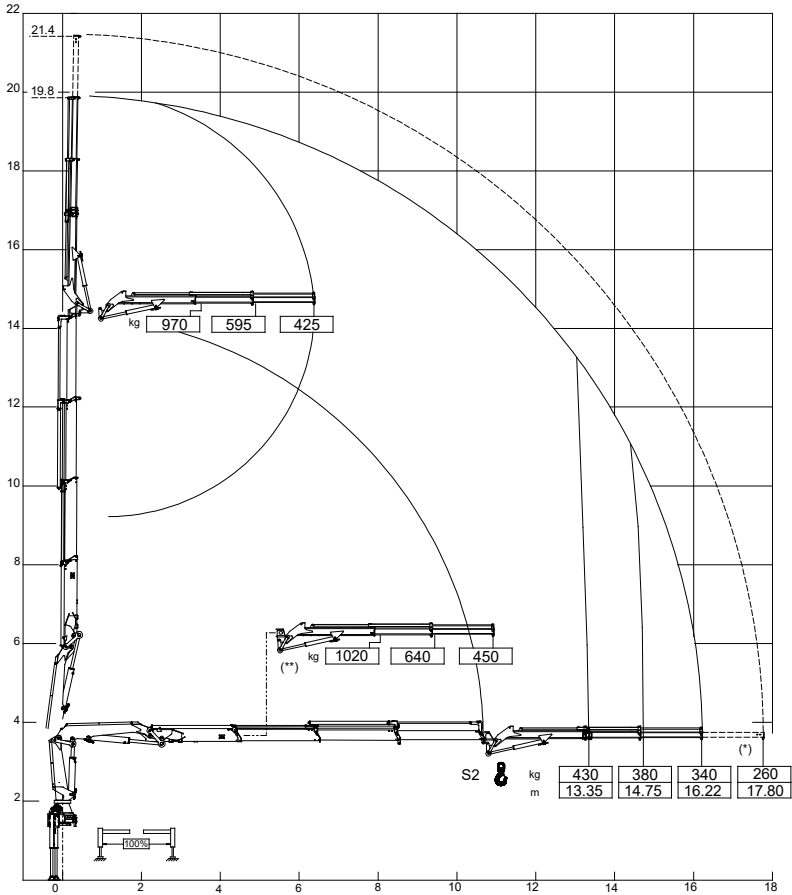

(*) Manual extensions (optional): these cannot lift additional hydraulic tools
 (**) Max. lifting capacity of jib


The given rated capacities can be moved only by operating the jib.

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHARTS FOR USE WITH HOOK 914NG 4SJ2

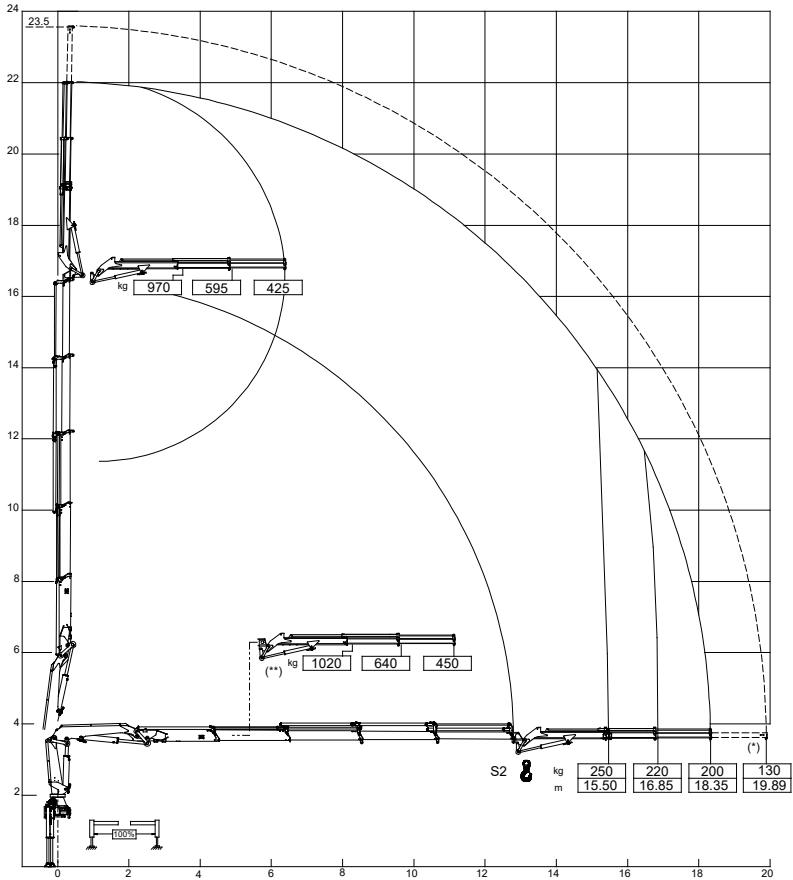

(*) Manual extensions (optional): these cannot lift additional hydraulic tools

(**) Max. lifting capacity of jib

The given rated capacities can be moved only by operating the jib.


USER MANUAL

914NG

TECHNICAL SHEET

D.9 LOAD CHARTS FOR T11 WINCH IN SINGLE LINE

914NG 2S + T11 SINGLE LINE

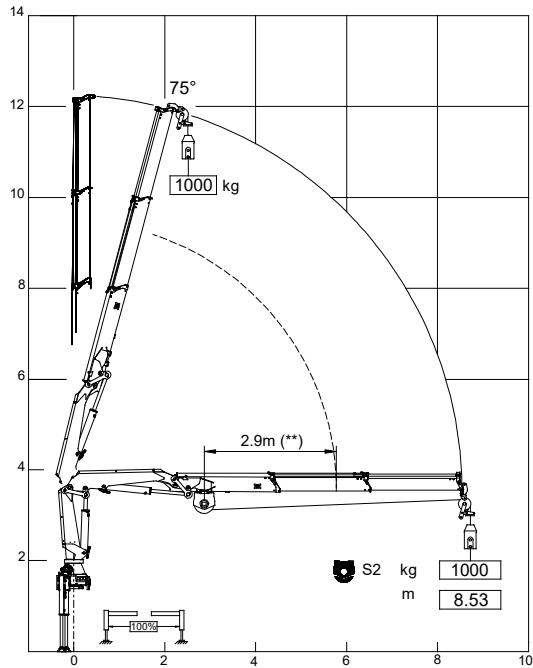


(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T11 IN SINGLE LINE 914NG 3S + T11 SINGLE LINE

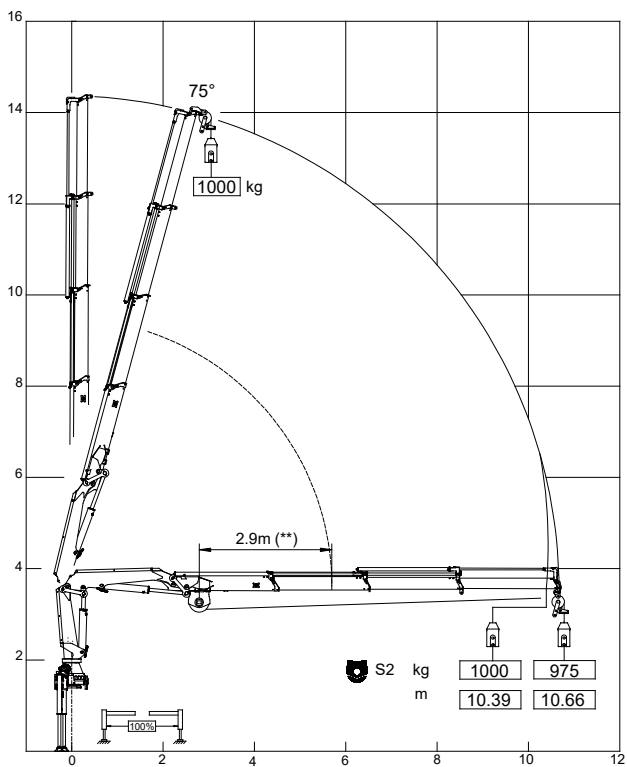


(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL

914NG

TECHNICAL SHEET


LOAD CHART FOR WINCH T11 IN SINGLE LINE 914NG 4S + T11 SINGLE LINE

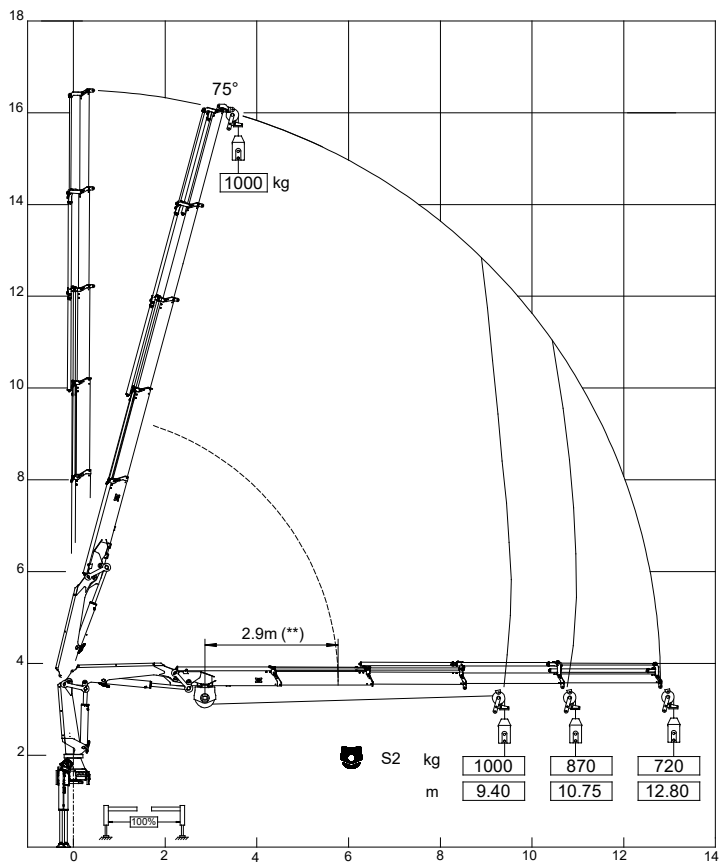

(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL
914NG
TECHNICAL SHEET

LOAD CHART FOR WINCH T11 IN SINGLE LINE
914NG 5S + T11 SINGLE LINE

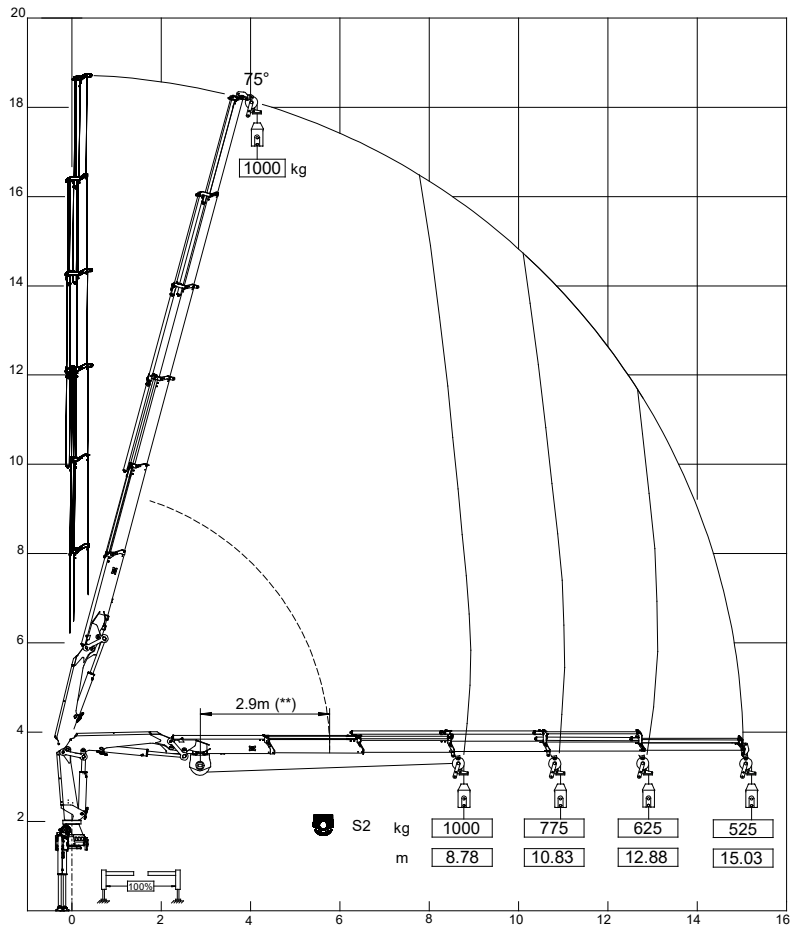


(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T11 IN SINGLE LINE 914NG 6S + T11 SINGLE LINE

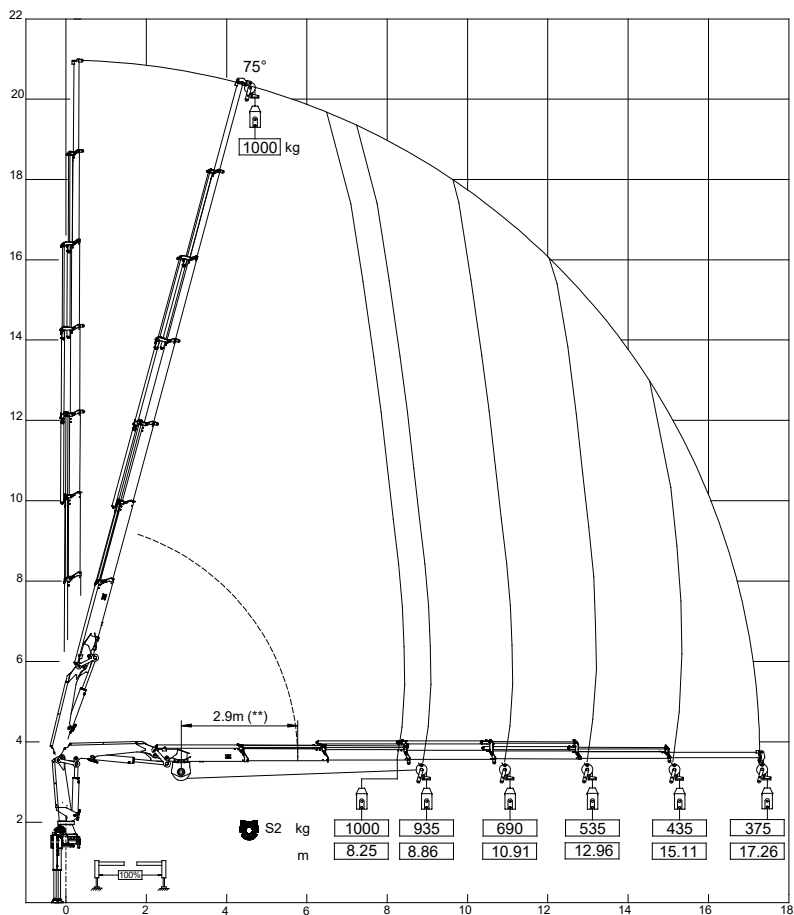

(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg


USER MANUAL

914NG

TECHNICAL SHEET

D.10 LOAD CHARTS FOR T11 WINCH IN DOUBLE LINE

914NG 2S + T11 DOUBLE LINE

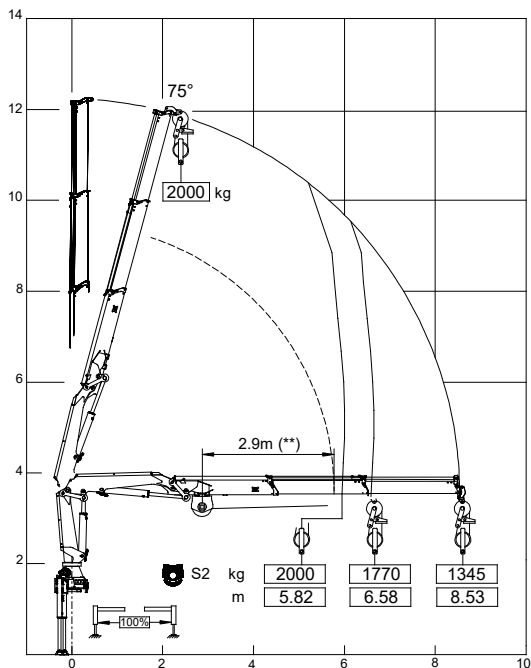


(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL

914NG

TECHNICAL SHEET


LOAD CHART FOR WINCH T11 IN DOUBLE LINE 914NG 3S + T11 DOUBLE LINE

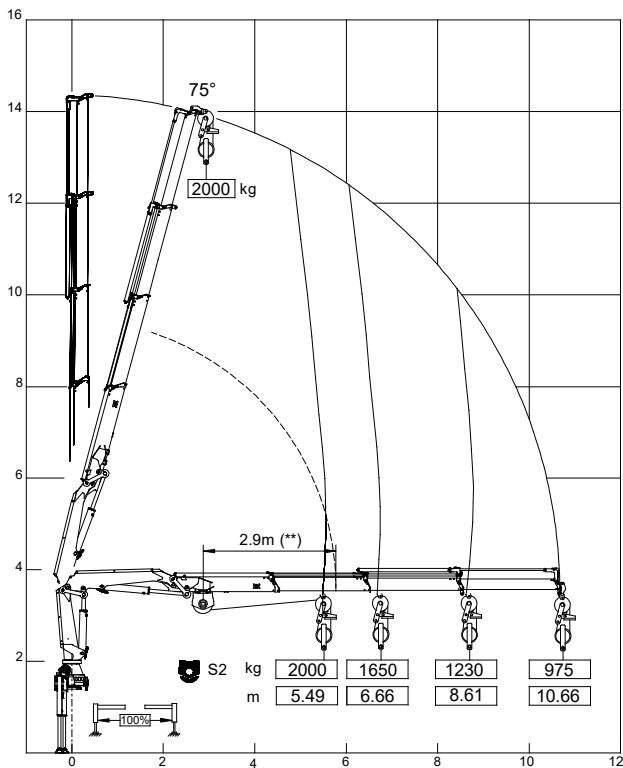

(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL
914NG
TECHNICAL SHEET


LOAD CHART FOR WINCH T11 IN DOUBLE LINE
914NG 4S + T11 DOUBLE LINE

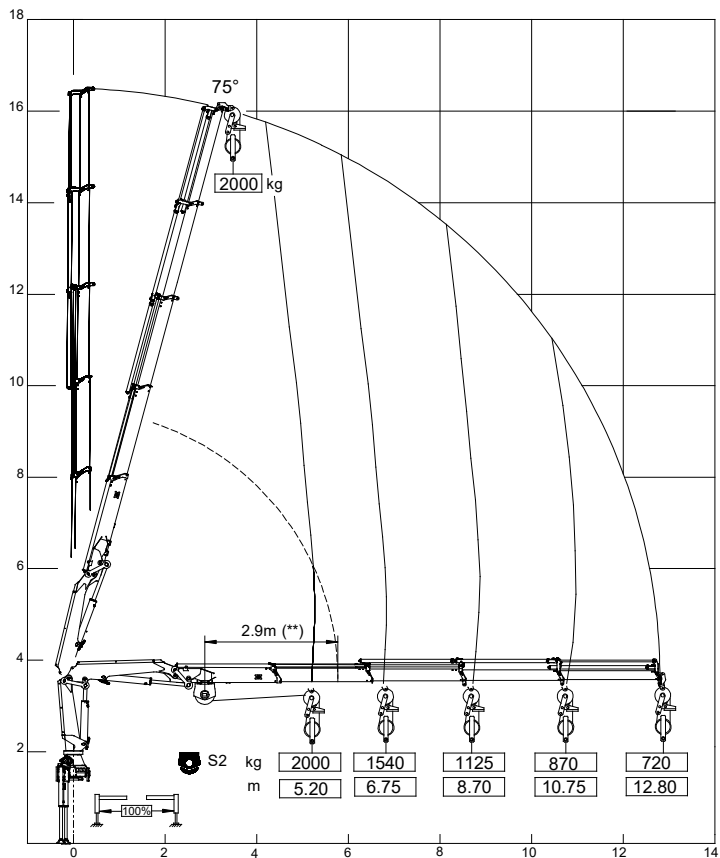

(**) Minimum distance winch - pulley
Winch max. pull: 1000 kg

USER MANUAL
914NG
TECHNICAL SHEET


LOAD CHART FOR WINCH T11 IN DOUBLE LINE
914NG 5S + T11 DOUBLE LINE

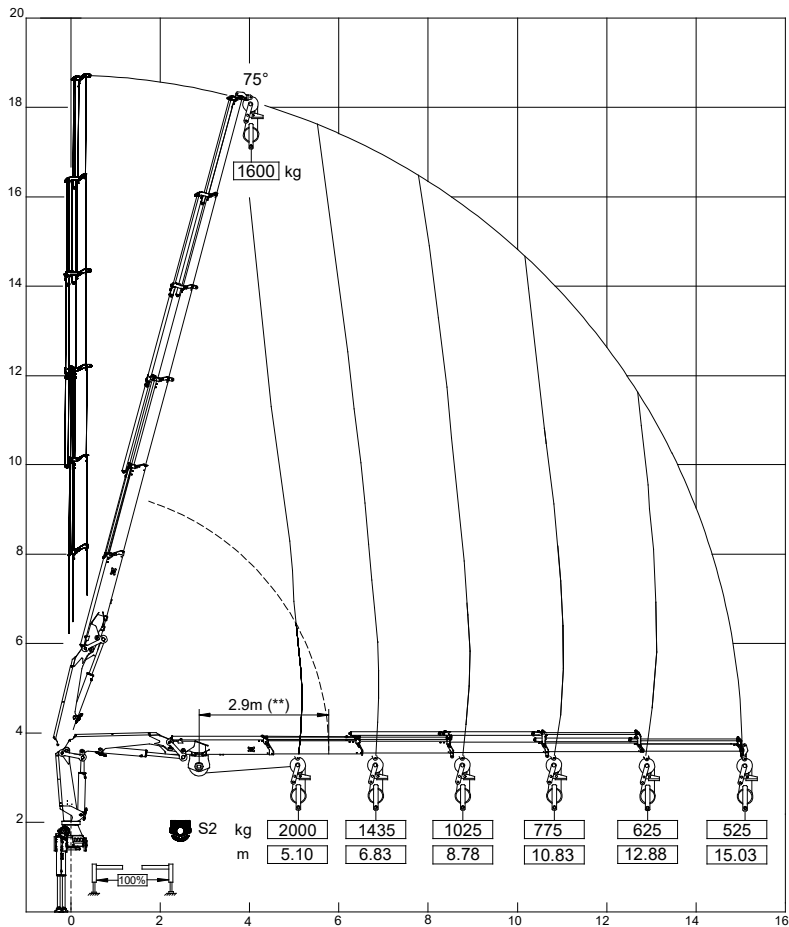

(**) Minimum distance winch - pulley
Winch max. pull with PCS: 1000 kg
PCS: Pull Control System, present on CE/TOP cranes

USER MANUAL 914NG TECHNICAL SHEET

LOAD CHART FOR WINCH T11 IN DOUBLE LINE
 914NG 6S + T11 DOUBLE LINE

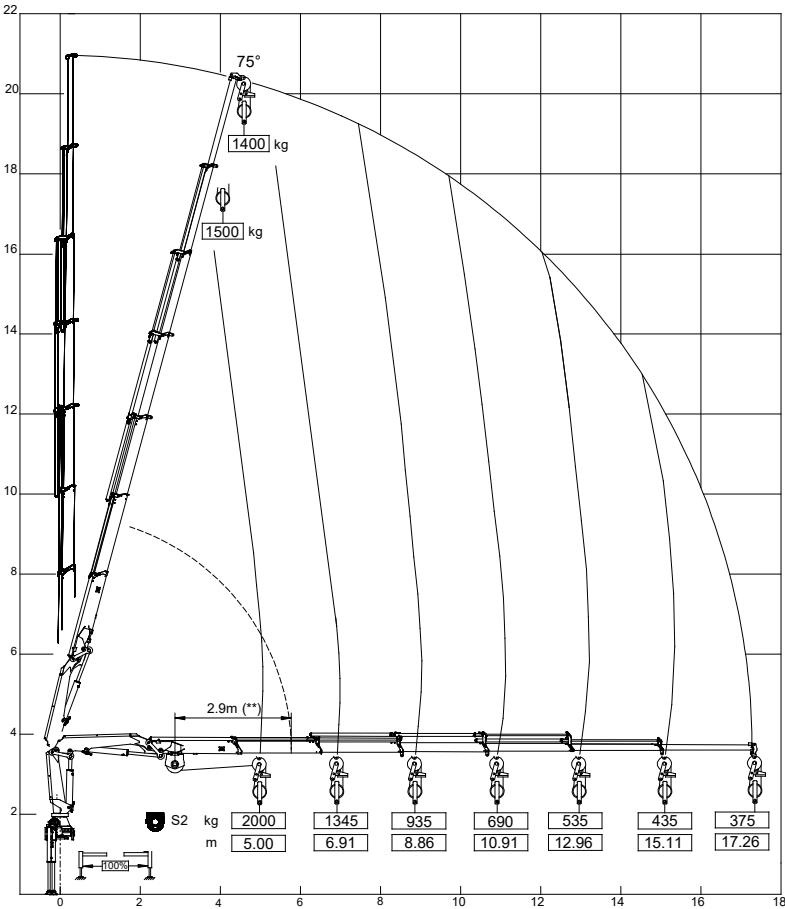

(**) Minimum distance winch - pulley
 Winch max. pull with PCS: 1000 kg
 PCS: Pull Control System, present on CE/TOP cranes


USER MANUAL

914NG

TECHNICAL SHEET

D.11 LOAD CHARTS FOR T12 WINCH IN SINGLE LINE

914NG 2S + T12 SINGLE LINE

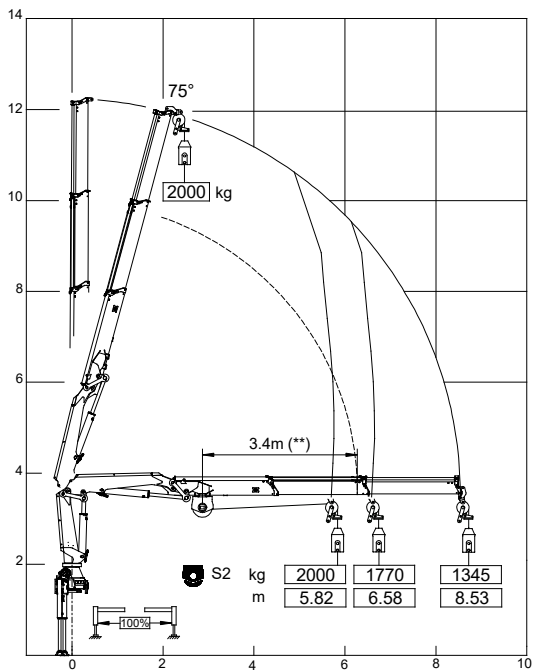


(**) Minimum distance winch - pulley
Winch max. pull: 2000 kg

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T12 IN SINGLE LINE 914NG 3S + T12 SINGLE LINE

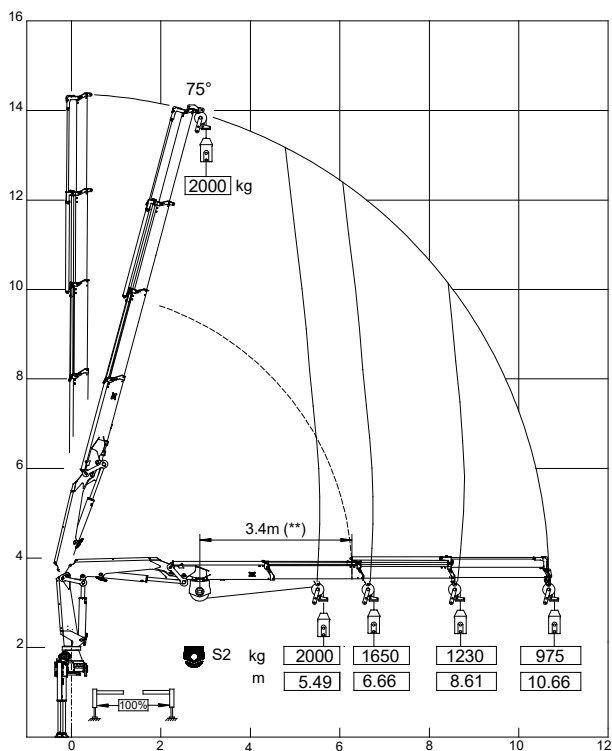


(**) Minimum distance winch - pulley
Winch max. pull: 2000 kg

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T12 IN SINGLE LINE 914NG 4S + T12 SINGLE LINE

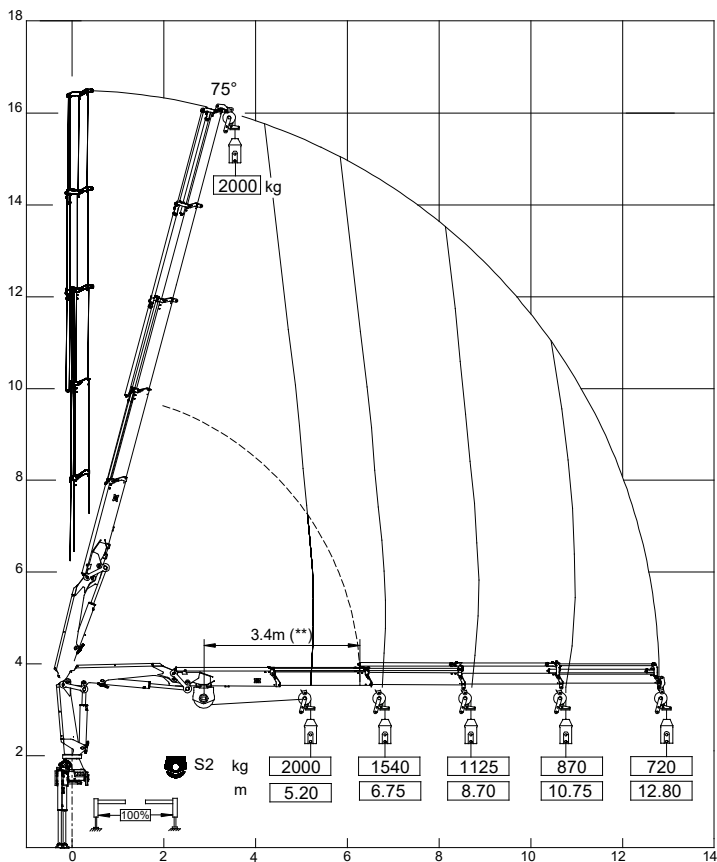


(**) Minimum distance winch - pulley
Winch max. pull: 2000 kg

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T12 IN SINGLE LINE 914NG 5S + T12 SINGLE LINE

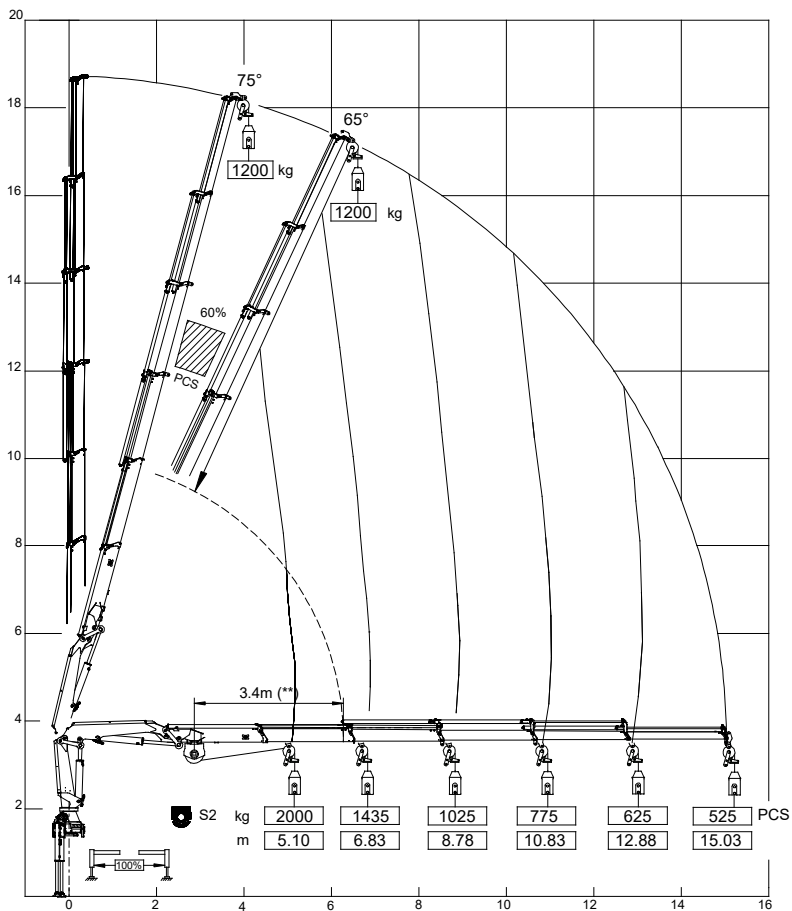

(**) Minimum distance winch - pulley

Winch max. pull with PCS: 2000 kg


PCS: Pull Control System, present on CE/TOP cranes

USER MANUAL

914NG

TECHNICAL SHEET

LOAD CHART FOR WINCH T12 IN SINGLE LINE 914NG 6S + T12 SINGLE LINE

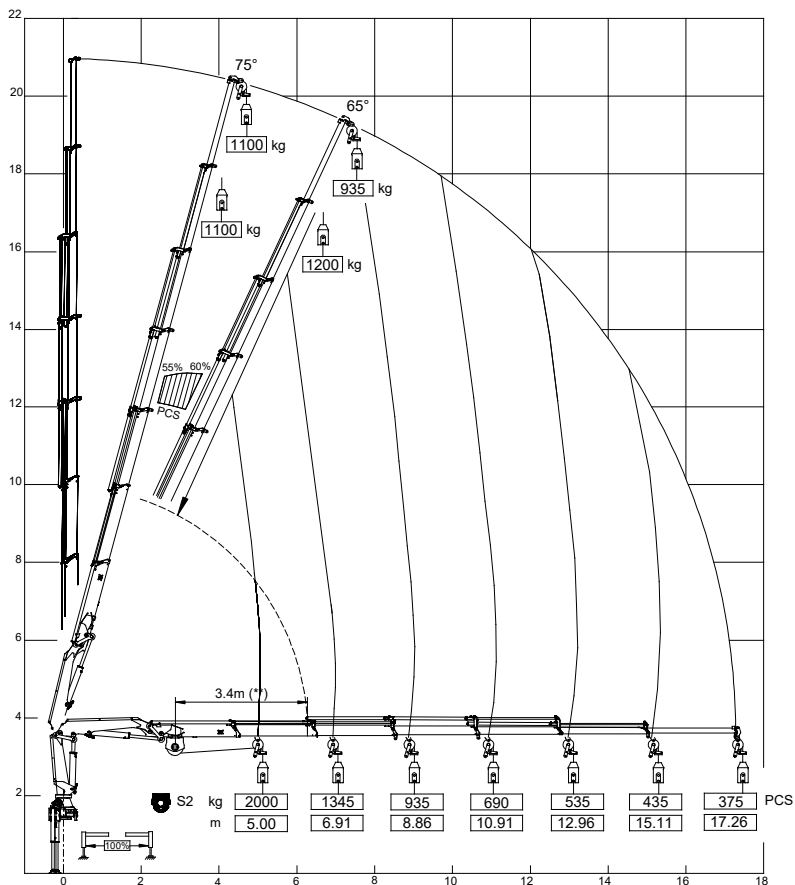

(**) Minimum distance winch - pulley
Winch max. pull with PCS: 2000 kg
PCS: Pull Control System, present on CE/TOP cranes

USER MANUAL


914NG

TECHNICAL SHEET

D.12 CENTERS OF GRAVITY AND TEST LOADS

This annex contains the data needed for the stability test in accordance with EN 12999.

Loads and centers of gravity

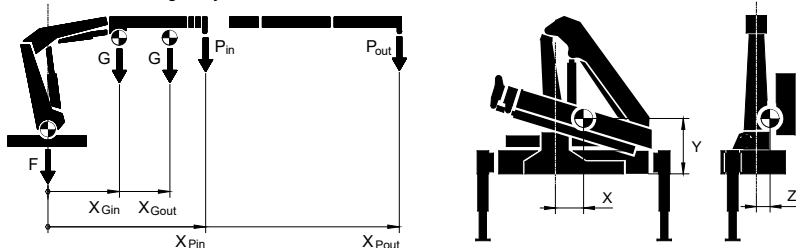

Hooking point for the test load



Key:

F = weight of fixed parts (stabilizers, base, column, 1st boom cylinder)

G = weight of booms

X_G = distance between G and column axis

P = rated capacity

X_P = distance between P and column axis

TL = test load, to be hooked to the last hydraulic extension

TL2 = additional test load, to be hooked to the last hydraulic extension excluding jib boom

X, Y, Z = coordinates of center of gravity for whole crane folded in transport position (EX-H version)

in = configuration with all hydraulic extensions fully retracted

out = configuration with all hydraulic extensions fully extracted

WEIGHTS AND CENTERS OF GRAVITY

914NG	F kg	G kg	X_G in / out m	P in / out kg	X_P in / out m	TL (TL2) kg	X	Y	Z
2S	ST-M : 1185 EX-M : 1245 EX-H : 1280 SE-H : 1335	635	2.53 3.59	2595 1345	4.63 8.53	1681	213	716	6
3S		750	2.68 4.45	2465 975	4.71 10.66	1233	205	738	24
4S		855	2.79 5.30	2340 720	4.80 12.80	935	197	758	37
5S		955	2.88 6.13	2225 525	4.88 15.03	708	190	777	51
6S		1045	2.95 6.93	2120 375	4.96 17.26	534	182	795	64
3SJ2		1090	6.26 6.43	430 340	13.35 16.22	425 (106)	171	805	65
4SJ2		1210	7.21 7.36	250 200	15.50 18.35	250 (125)	176	839	81

The data are relating to crane configuration with horizontal booms.

For the jib version, the "in" data are relating to standard crane's extensions always fully extracted.

USER MANUAL


914NG

TECHNICAL SHEET

D.13 HOOK DATA

HOOK MOUNTED ON STANDARD BOOM
VERSIONS: 2S, 3S, 4S, 5S, 6S

DIMENSIONS

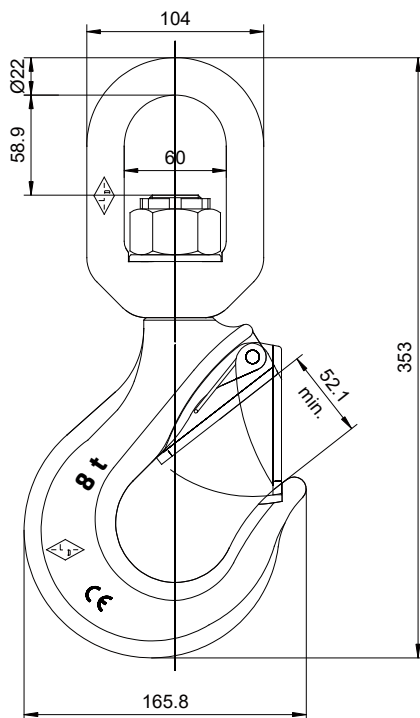

TECHNICAL PROPERTIES

Working load limit (WLL) : 8000 kg

Material: alloy steel

Weight: 6.2 kg

Swivel hook

Reference standard: DIN 15401

USER MANUAL


914NG

TECHNICAL SHEET

HOOK DATA

HOOK MOUNTED ON JIB BOOM
VERSION: 3SJ2 - 4SJ2

DIMENSIONS

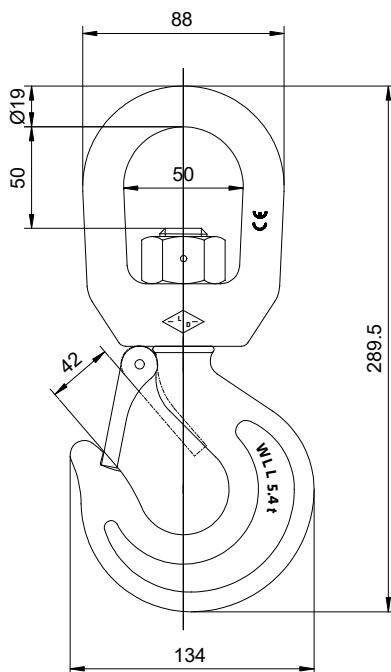

TECHNICAL PROPERTIES

Working load limit (WLL) : 5400 kg

Material: alloy steel

Weight: 3.2 kg

Swivel hook

Reference standard: DIN 15401



USER MANUAL

914NG

TECHNICAL SHEET

D.14 LOAD ATTACHMENT

ATTACHMENT FOR HOOK AND LIFTING TOOL

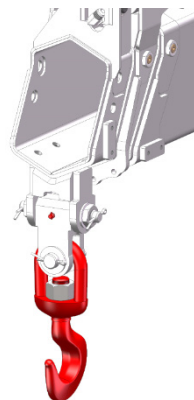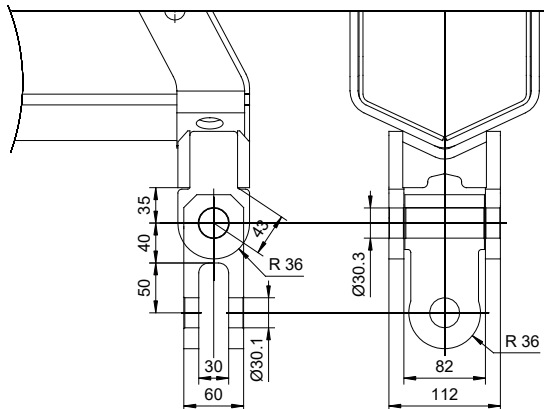



USER MANUAL

914NG

TECHNICAL SHEET

D.15 HYDRAULIC SYSTEM

FITTINGS FOR CONNECTION TO PUMP

914NG	NO RDC	RDC
Control valve pressure line	 M 7/8"-14 JIC	 M 3/4"-16 GAS
Tank suction line	 M 1"1/2 BSP	 M 1" 1/2 BSP

EXTENSION TIMES OF HYDRAULIC CYLINDERS

914NG	Extension time s	Retraction time s
Slewing (180°)	20	20
1.boom cylinder	21	30
2.boom cylinder	14	10
boom extension 1S (SGS active)	10	6
boom extension 2S (SGS active)	12	13
boom extension 3S (SGS active)	16	19
boom extension 4S (SGS active)	27	27
boom extension 5S (SGS active)	33	33
boom extension 6S (SGS active)	40	40
jib articulation cylinder	6	7
jib extension 2S	9	14

Times are indicative and referring to the following operating conditions:

- unloaded crane operated with a single control lever
- oil flow rate recommended for NO RDC crane
- ISO VG 46 oil at a temperature of 50°C

MAX. ALLOWABLE SINK RATE FOR THE LOAD

The sink rate is the uncontrolled descent of the load in a given time interval due to internal leakage of hydraulic components. The table below shows the maximum permitted descent of the rated load, at the max. hydraulic outreach and in the given time interval.

914NG	Time interval min.	Max. load descent mm
2S	10	426
3S	10	533
4S	10	256
5S	10	300
6S	10	345
3SJ2	10	324
4SJ3	10	367

USER MANUAL

914NG

TECHNICAL SHEET

CAPACITY OF HYDRAULIC SYSTEM

914NG	Cylinders extended ℓ	Cylinders retracted ℓ
2S	57	39
3S	65	44
4S	73	49
5S	81	55
6S	88	60
3SJ2	82	55
4SJ2	90	60

Capacities do not include the oil tank.

ADDITIONAL CAPACITY FOR HYDRAULICALLY OPERATED STABILIZER EXTENSIONS

EX-H	+4.0	+2.5
SE-H	+5.5	+3.5

USER MANUAL

914NG

TECHNICAL SHEET

D.16 OIL COOLER



TECHNICAL SPECIFICATIONS


Heat transfer coefficient: 235 W/K (oil flow rate of 40 l/min)

Activation temperature: 48 °C

Weight: 13.5 kg

Capacity: 4 l

For a crane without oil cooler performing a sequence of standard work cycles, the difference in temperature between the oil and the environment is shown in the graph below.

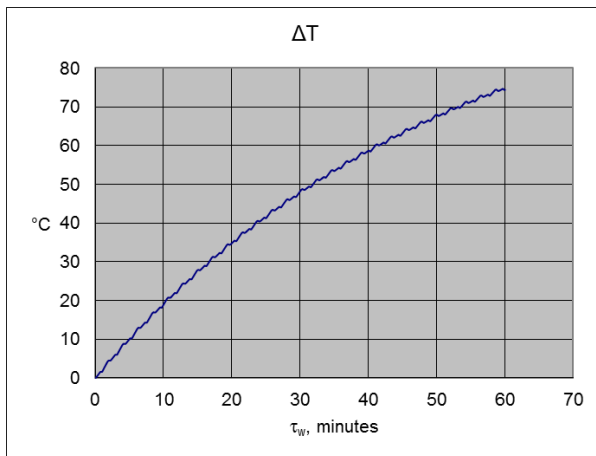

The oil cooler is recommended when

$$T_{env} + \tau_w > 57$$

where:

T_{env} : temperature of the environment (°C)

ΔT : difference in temperature between the oil and the environment (°C)

τ_w : working time (minutes)

USER MANUAL


914NG

TECHNICAL SHEET

However, when a crane equipped with oil cooler carries out a sequence of standard work cycles, the oil temperature exceeds 75 °C after the following working times:

T_{env} (°C)	τ_w to exceed 75 °C (minutes)
45	no limit
48	35
50	25
52	20
54	15

The graph below shows the temperature trend (T_{oil}) with oil cooler when $T_{env} = 45$ °C.

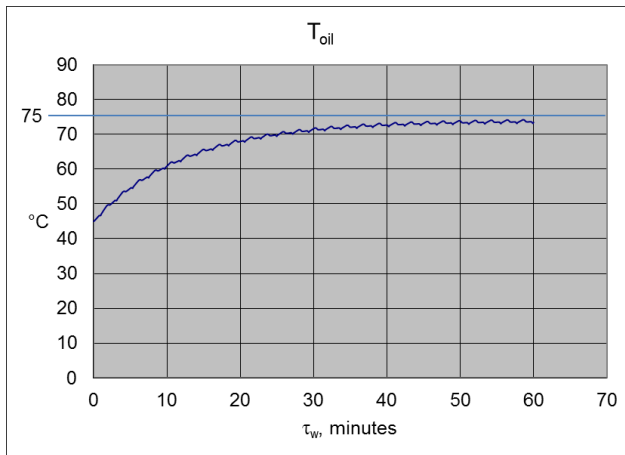


Notes:

The max recommended oil temperature is 75°C (at 80°C you must stop working)

The calculation of the oil temperature is purely indicative and depending on several variables (e.g. working cycle, wind, humidity, weather, etc.)

USER MANUAL
914NG
TECHNICAL SHEET

D.17 ADDITIONAL STABILIZERS

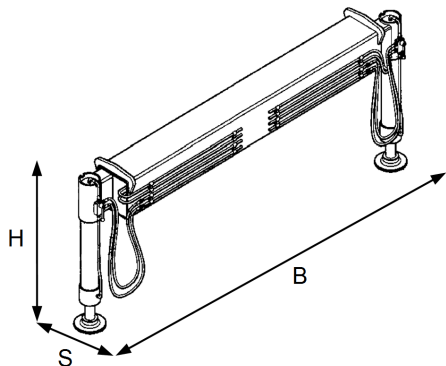

Additional stabilizers must be chosen so that:

- the installation is stable (see Installer Manual)
- the max. force acting on the additional stabilizers, F_s , is lower than the max. load allowed by the stabilizers itself, R_{max} .


$$F_s = M_{dyn} / X_s \qquad F_s \geq 0.6 F_{sg}$$

where:

- M_{dyn} : max. dynamic moment of the crane
- X_s : distance between column axis - stab. cylinder
- F_{sg} : max force on stabilizer leg

Check that: $F_s \leq R_{max}$

R_{max} is given in the technical specifications of the additional stabilizers.

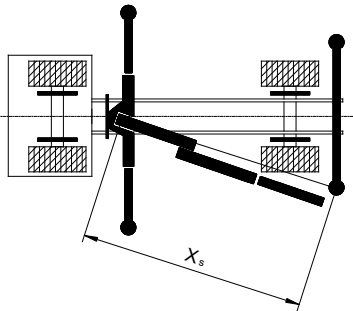

- In addition, CE additional stabilizer must be equipped with safety devices integrated with the crane's stability control system. Therefore we recommend to install the following models designed by the crane's manufacturer:

Code	Spread (m)	Weight (kg)	R_{max} (kg)	Overall dimensions BxHxS (mm)
7850088	2.00	155	6250	2160x770x190
7850086	3.32	220	6250	2285x780x240
7850087	3.32	235	6250	2285x780x240

For further information see the User Manual for outriggers.


USER MANUAL

914NG

TECHNICAL SHEET

D.18 RECOMMENDED ADDITIONAL LIFTING TOOLS

CLAMSHELL BUCKET

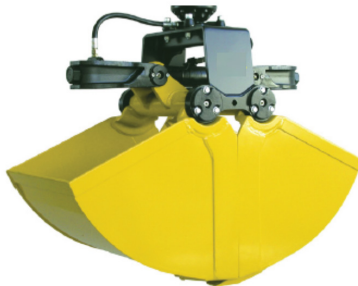

Crane version	Gross load kg ⁽¹⁾	Data of recommended tool				Payload kg ⁽³⁾	Load ratio	
		HYVA model	weight kg	volume dm ³	capacity kg ⁽²⁾		crane ⁽⁴⁾	tool ⁽⁵⁾
2S	1345	H605-650	410	650	975	935	100%	96%
3S	975	H605-650	410	650	975	565	100%	58%
		H605-550	375	550	825	600	100%	73%
4S	720	H605-450	340	450	675	380	100%	56%
		H604-350	240	350	525	480	100%	91%
5S	525	H604-325	235	325	487,5	290	100%	59%
		H604-250	220	250	375	305	100%	81%
6S	375	H604-200	195	200	300	180	100%	60%

Notes

⁽¹⁾ The gross load is the load capacity of crane at maximum hydraulic outreach

⁽²⁾ The tool's load capacity is calculated multiplying the volume by a density of 1.5 kg/dm³

⁽³⁾ The payload is the gross load of crane minus the tool's weight

⁽⁴⁾ The crane's load ratio is the percentage value of the liftable load with respect to the gross load

⁽⁵⁾ The tool's load ratio is the percentage value of the liftable load with respect to tool's capacity

Stress history class: S1

USER MANUAL

914NG

TECHNICAL SHEET

RECOMMENDED ADDITIONAL LIFTING TOOLS ORANGE PEEL GRAPPLE



Crane version	Gross load kg ⁽¹⁾	Data of recommended tool				Payload kg ⁽³⁾	Load ratio	
		HYVA model	weight kg	volume dm ³	capacity kg ⁽²⁾		crane ⁽⁴⁾	tool ⁽⁵⁾
2S	1345	H653-4 large	435	500	750	910	88%	100%
3S	975	H653-4 large	435	500	750	540	100%	72%
4S	720	H653-4 large	395	350	525	325	100%	62%
5S	525	H653-4 small	250	240	360	275	100%	76%
6S	375	H653-4 small	235	180	270	140	100%	52%

Notes

- ⁽¹⁾ The gross load is the load capacity of crane at maximum hydraulic outreach
- ⁽²⁾ The tool's load capacity is calculated multiplying the volume by a density of 1.5 kg/dm³
- ⁽³⁾ The payload is the crane's gross load minus the tool's weight
- ⁽⁴⁾ The crane's load ratio is the percentage value of the liftable load with respect to the gross load
- ⁽⁵⁾ The tool's load ratio is the percentage value of the liftable load with respect to tool's capacity

Stress history class: S1

USER MANUAL
914NG
TECHNICAL SHEET

RECOMMENDED ADDITIONAL LIFTING TOOLS
LOGGING GRAPPLE



Crane version	Gross load kg ⁽¹⁾	Data of recommended tool			Payload kg ⁽²⁾	Load ratio	
		HYVA model	weight kg	capacity kg		crane ⁽³⁾	tool ⁽⁴⁾
2S	1345	H634-0,25	170	4000	1175	100%	29%
3S	975	H634-0,25	170	4000	805	100%	20%
4S	720	H634-0,25	170	4000	550	100%	14%
5S	525	H634-0,25	170	4000	355	100%	9%
6S	375	H634-0,25	170	4000	205	100%	5%

Notes

- ⁽¹⁾ The gross load is the load capacity of crane at maximum hydraulic outreach
- ⁽²⁾ The payload is the gross load of crane minus the tool's weight
- ⁽³⁾ The crane's load ratio is the percentage value of the liftable load with respect to the gross load
- ⁽⁴⁾ The tool's load ratio is the percentage value of the liftable load with respect to tool's capacity

Stress history class: S1

USER MANUAL

914NG

TECHNICAL SHEET

RECOMMENDED ADDITIONAL LIFTING TOOLS BRICK STACK GRAPPLE



Crane version	Gross load kg ⁽¹⁾	Data of recommended tool			Payload kg ⁽²⁾	Load ratio	
		HYVA model	weight kg	capacity kg		crane ⁽³⁾	tool ⁽⁴⁾
2S	1345	H332-1300	265	1600	1080	100%	68%
3S	975	H332-1300	265	1600	710	100%	44%
4S	720	H332-1300	265	1600	455	100%	28%
5S	525	H332-1300	265	1600	260	100%	16%
6S	375	H332-1300	265	1600	110	100%	7%

Notes

⁽¹⁾ The gross load is the load capacity of crane at maximum hydraulic outreach

⁽²⁾ The payload is the gross load of crane minus the tool's weight

⁽³⁾ The crane's load ratio is the percentage value of the liftable load with respect to the gross load

⁽⁴⁾ The tool's load ratio is the percentage value of the liftable load with respect to tool's capacity

Stress history class: S2

USER MANUAL

914NG

TECHNICAL SHEET

RECOMMENDED ADDITIONAL LIFTING TOOLS PALLET FORK



Crane version	Gross load kg ⁽¹⁾	Data of recommended tool			Payload kg ⁽²⁾	Load ratio	
		HYVA model	weight kg	capacity kg		crane ⁽³⁾	tool ⁽⁴⁾
2S	1345	H415 1500-500	135	1500	1210	100%	81%
3S	975	H415 1500-500	135	1500	840	100%	56%
4S	720	H415 1500-500	135	1500	585	100%	39%
5S	525	H415 1500-500	135	1500	390	100%	26%
6S	375	H415 1500-500	135	1500	240	100%	16%

Notes

- ⁽¹⁾ The gross load is the load capacity of crane at maximum hydraulic outreach
- ⁽²⁾ The payload is the gross load of crane minus the tool's weight
- ⁽³⁾ The crane's load ratio is the percentage value of the liftable load with respect to the gross load
- ⁽⁴⁾ The tool's load ratio is the percentage value of the liftable load with respect to tool's capacity

Stress history class: S2